 



# Kinetic Swing Installation Instruction




450 kilogram

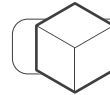

 4650 x 2600 x 1970 (mm)

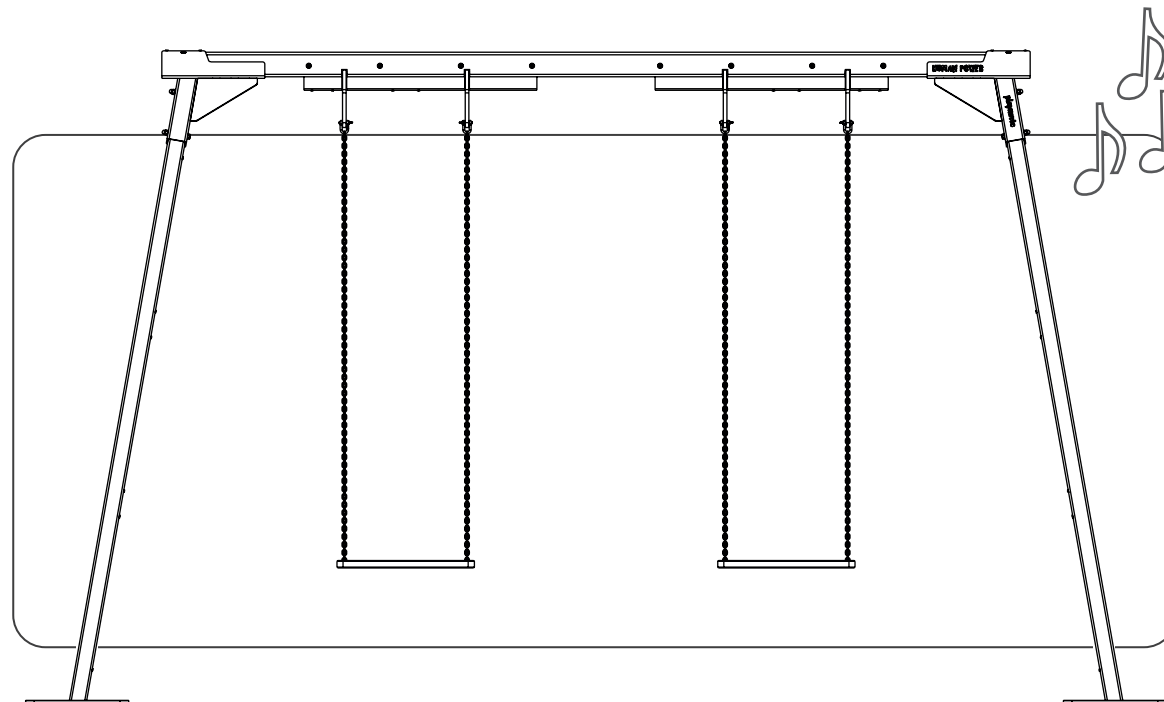

SW90017\_14102019

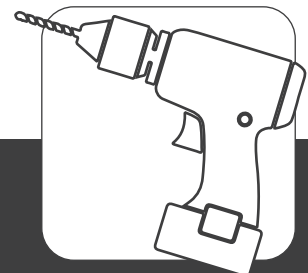 




3 ..... Obstacle free zone

Assemble product


 
4

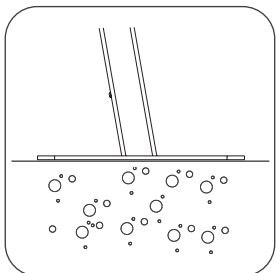



8 ..... Foundation option 1:  
Surface mounted


Foundation option 2:  
Concrete base

  
10



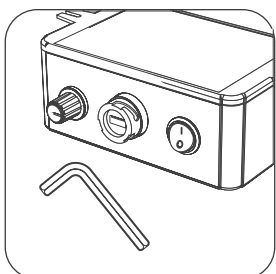
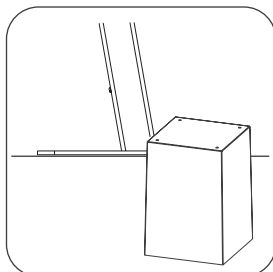




12 ..... Open service hatch





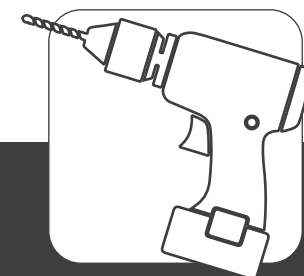 
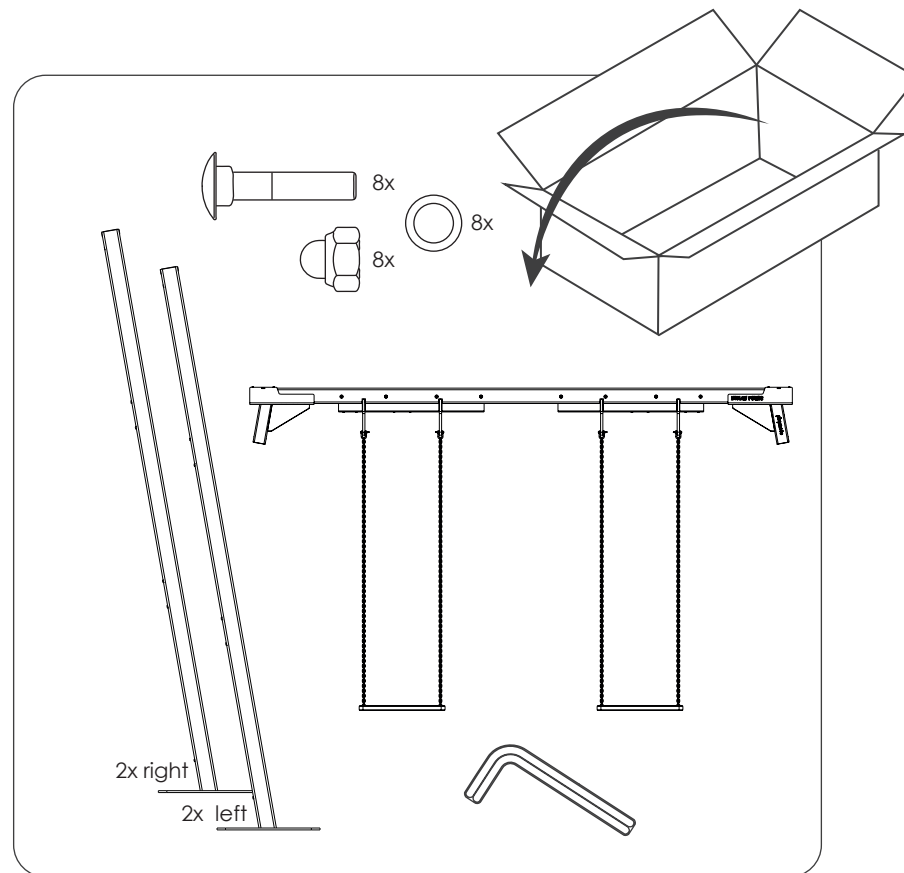 



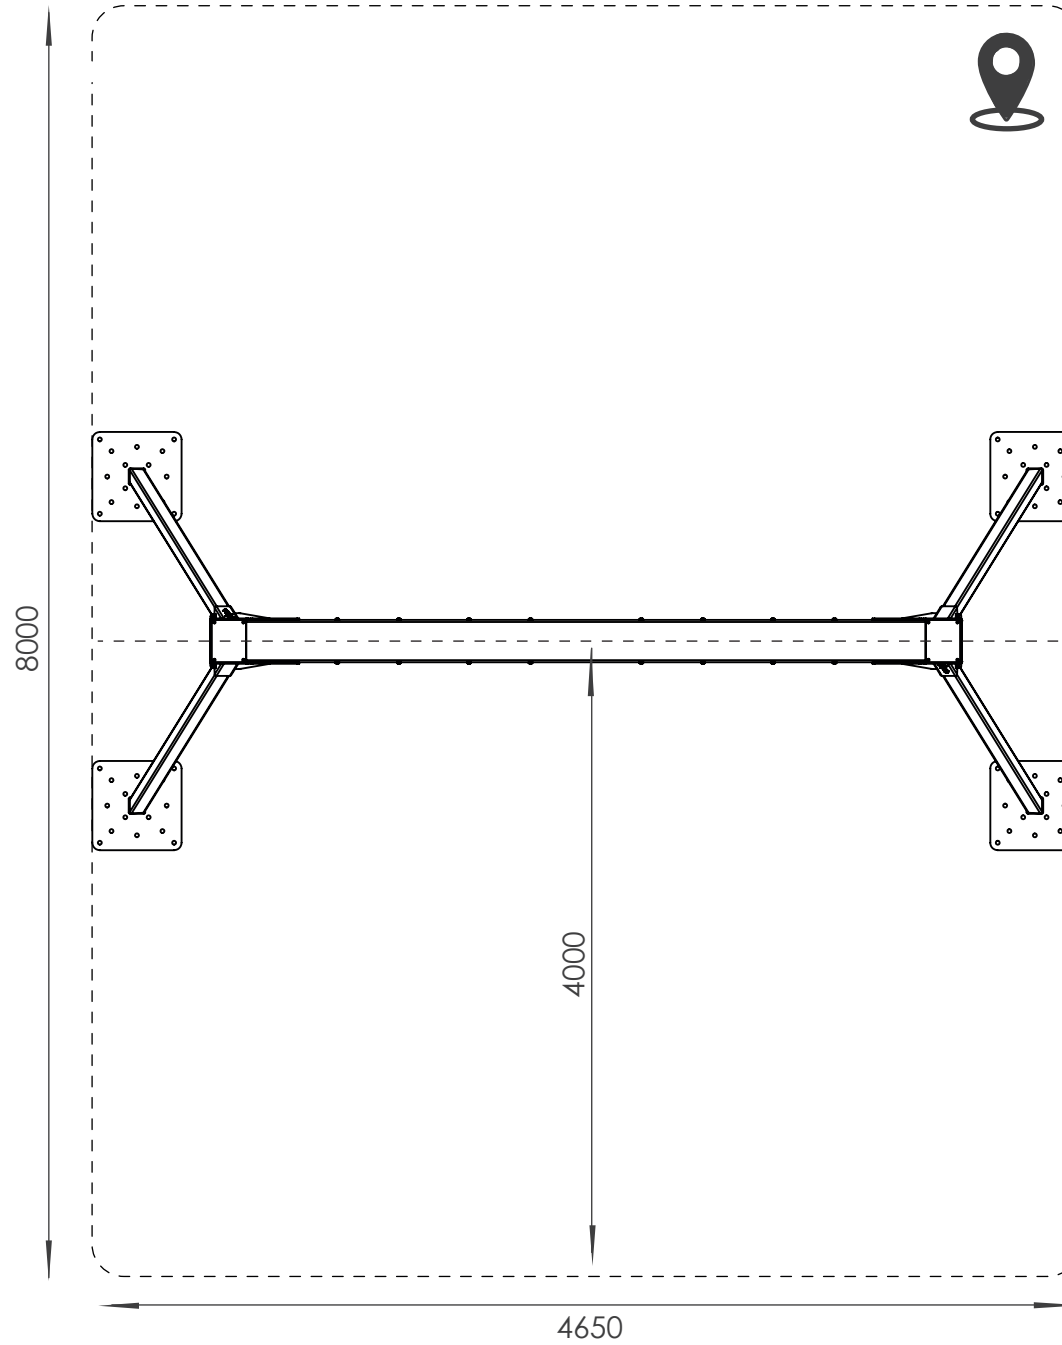 


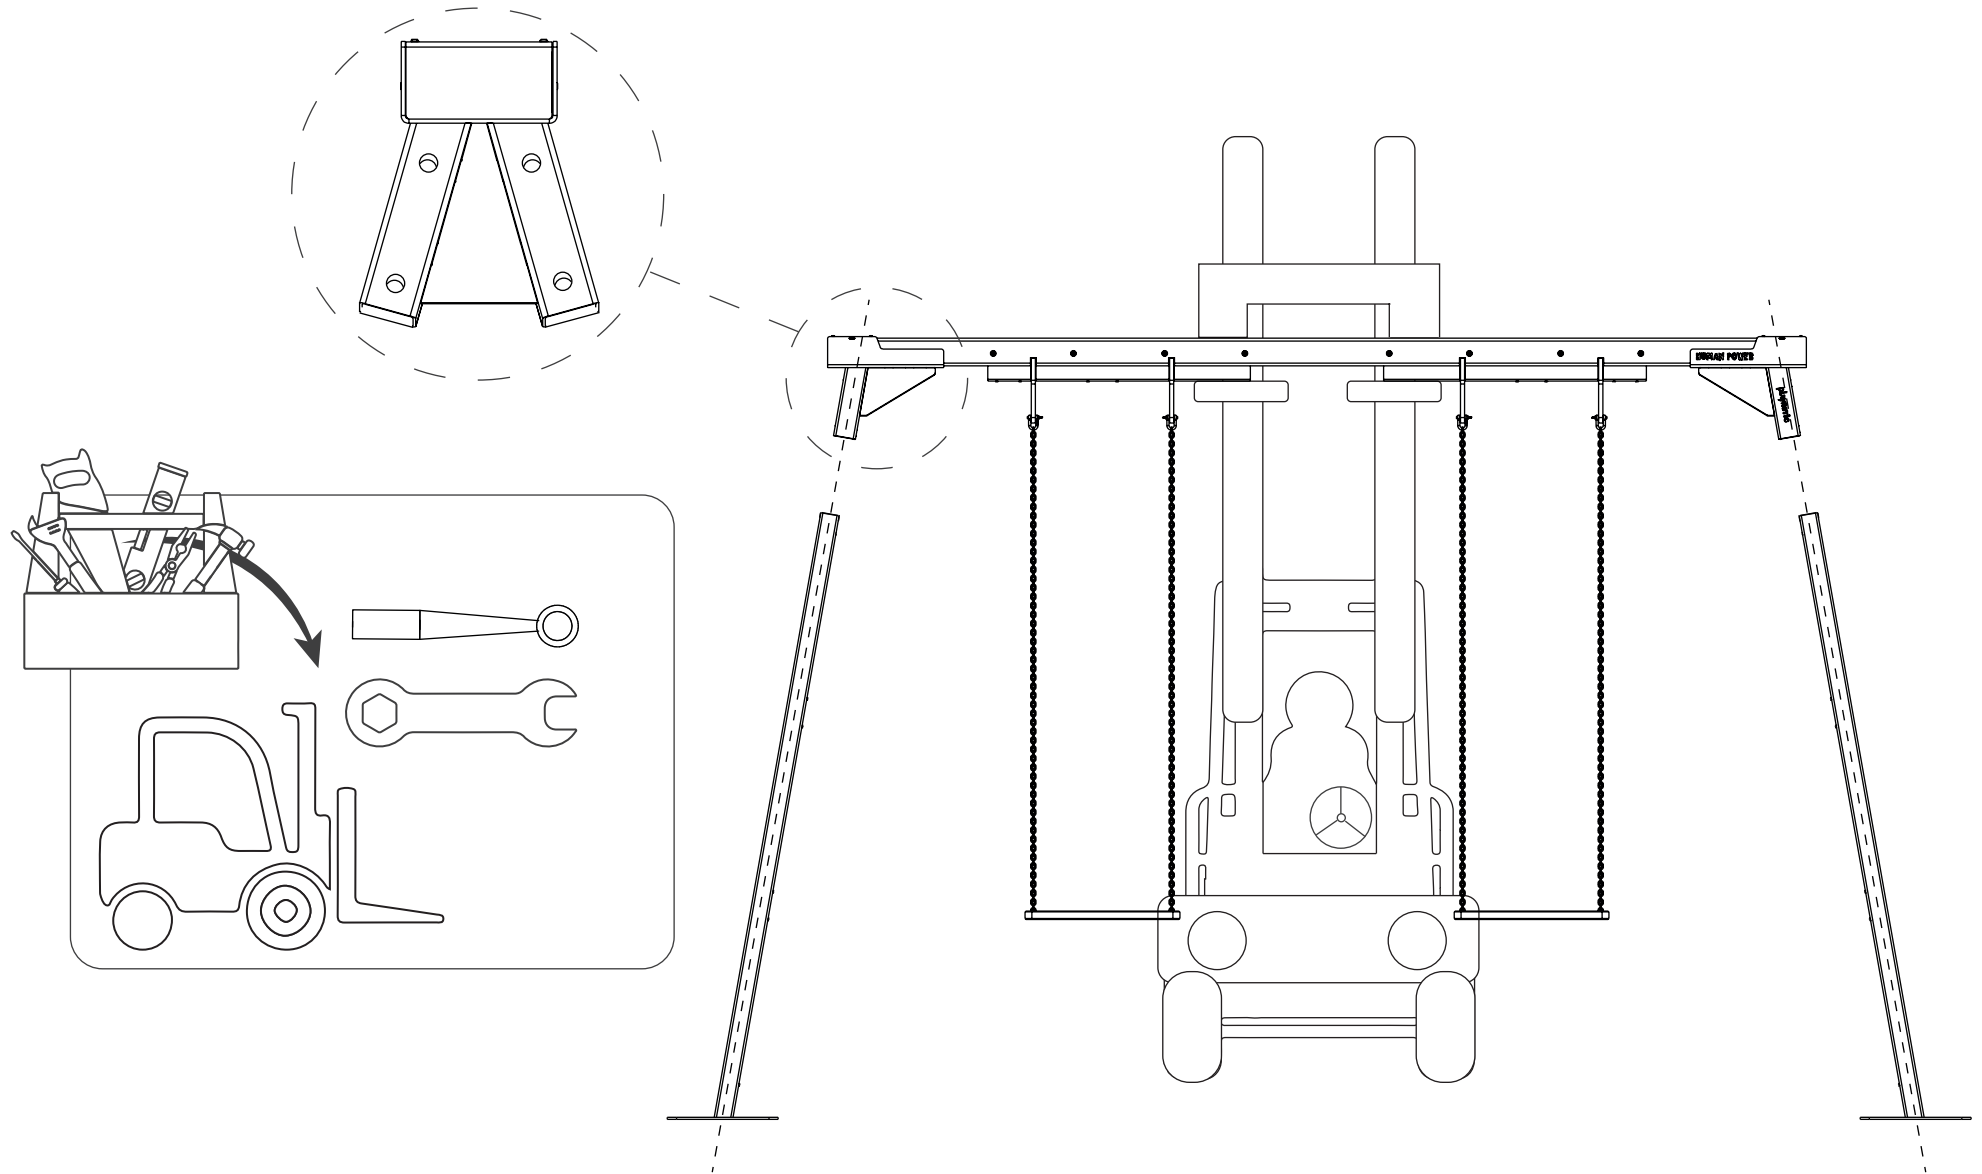 

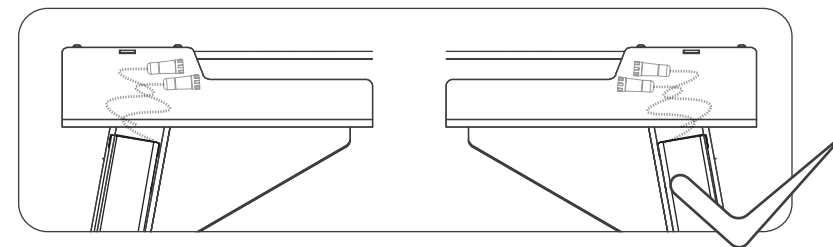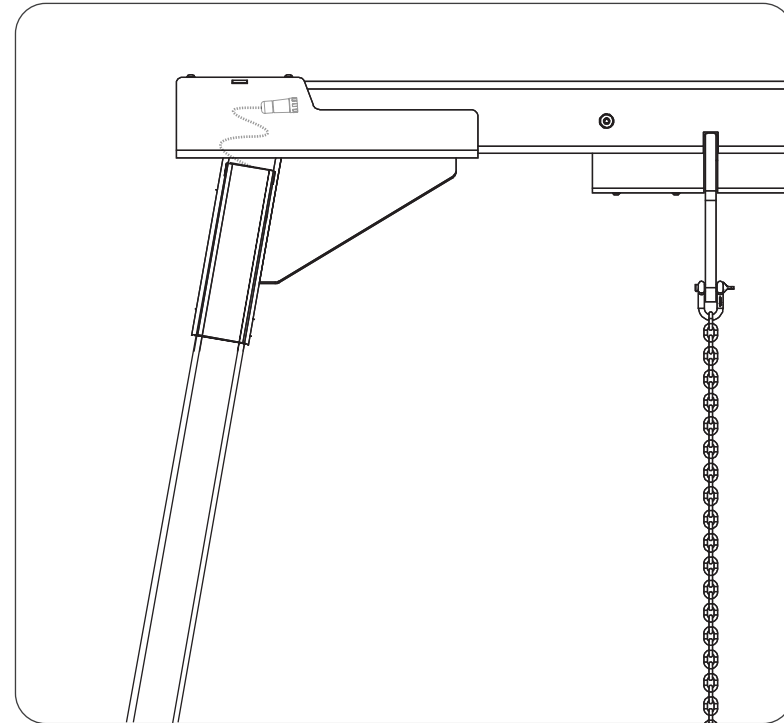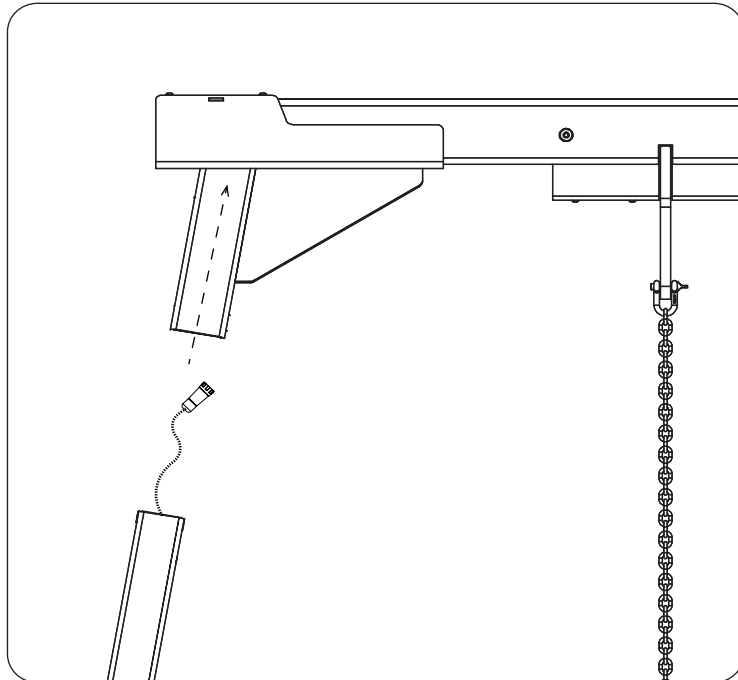   
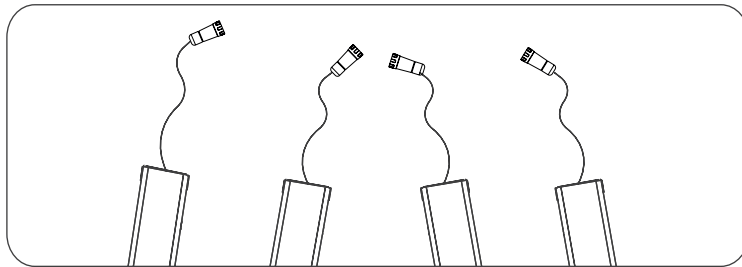 


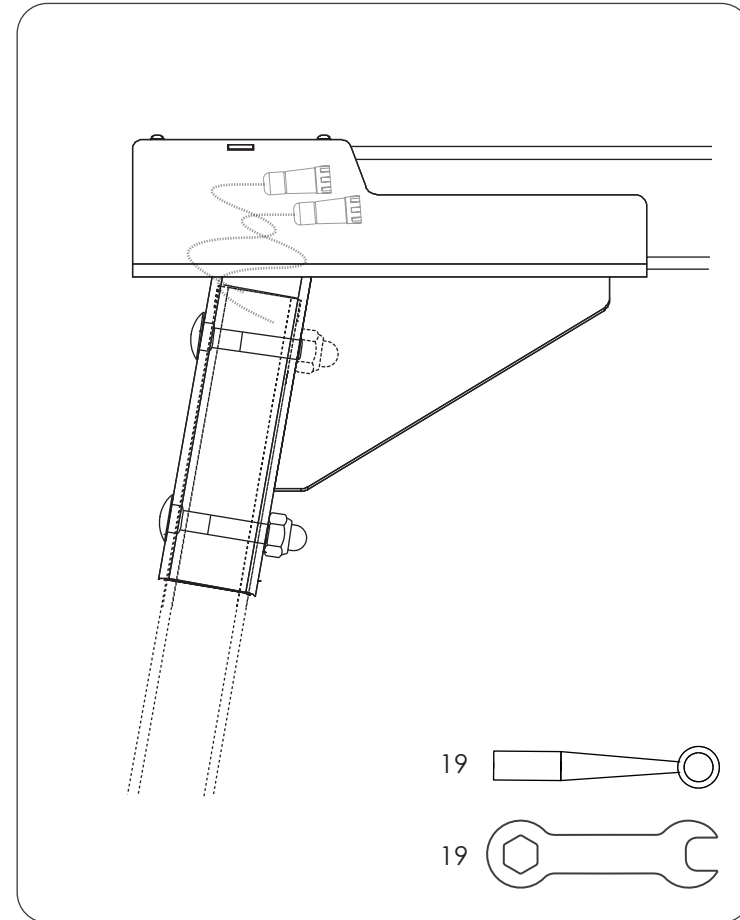             
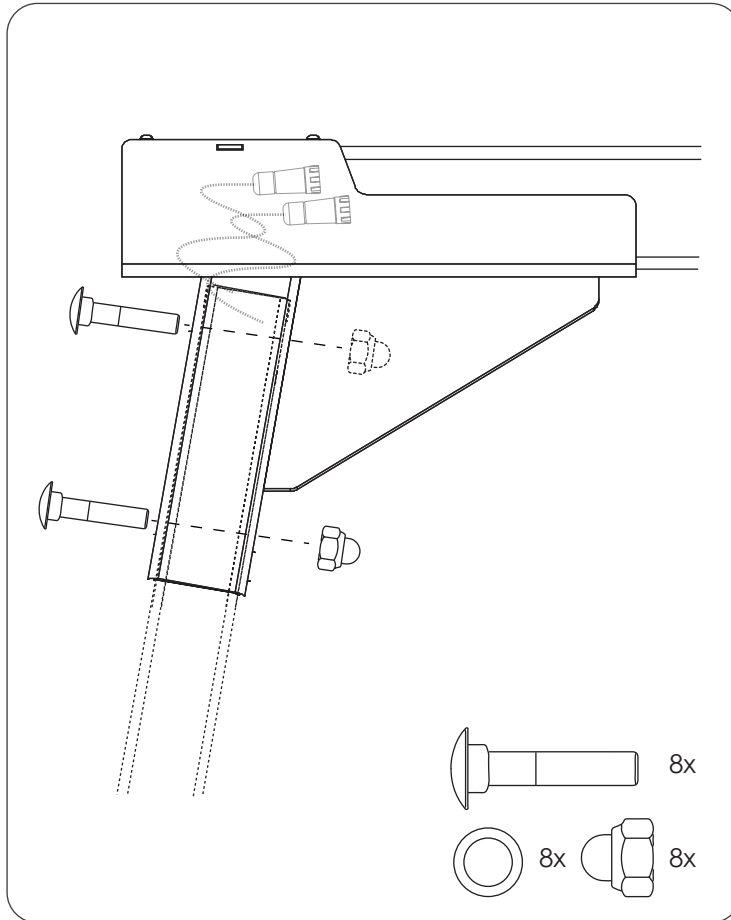 


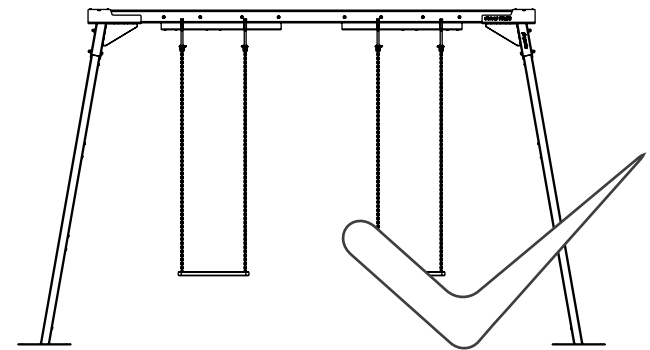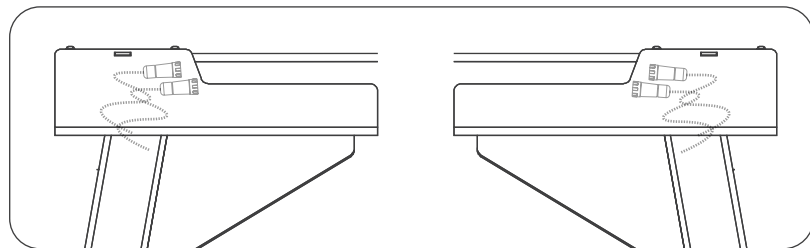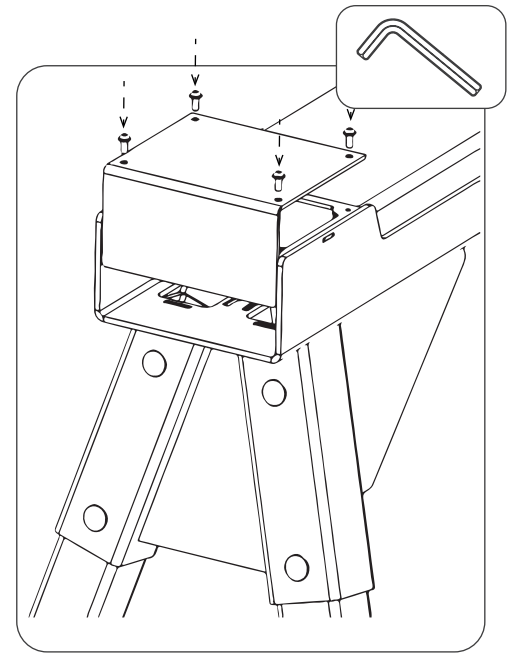 
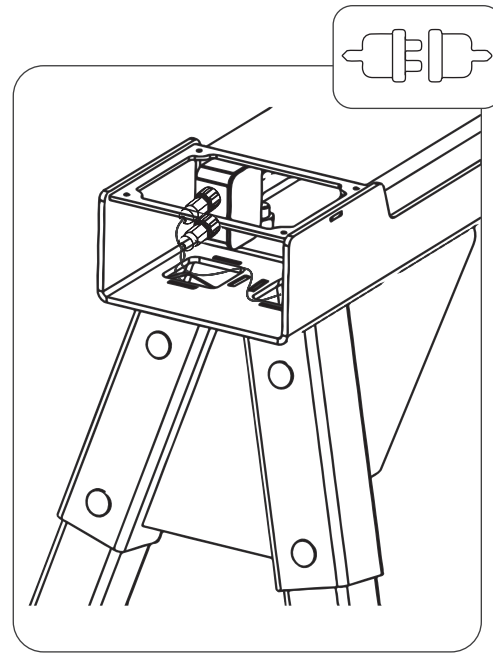 
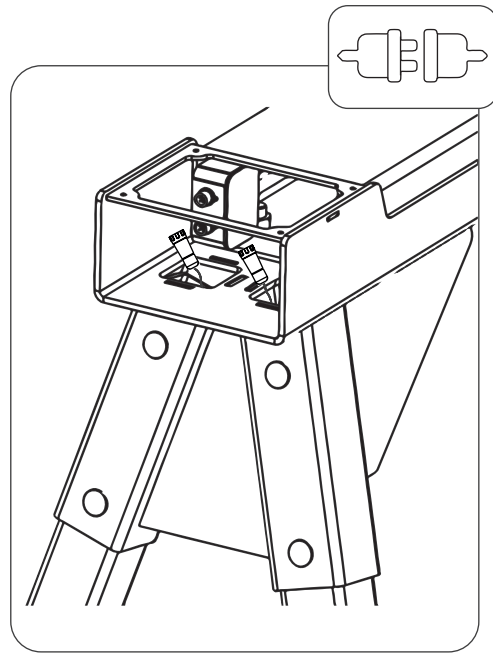 
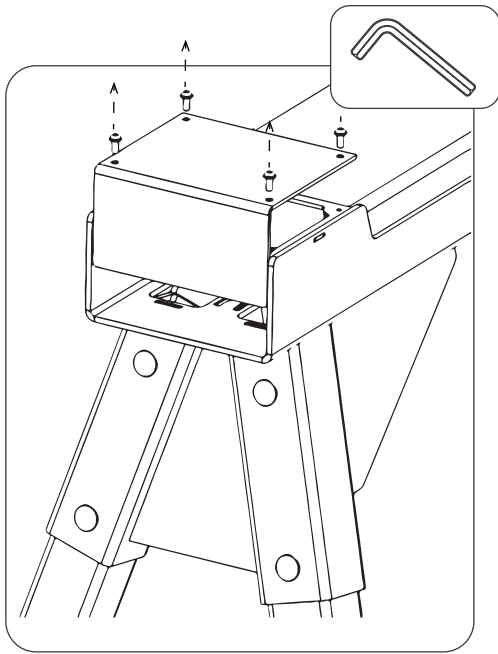 


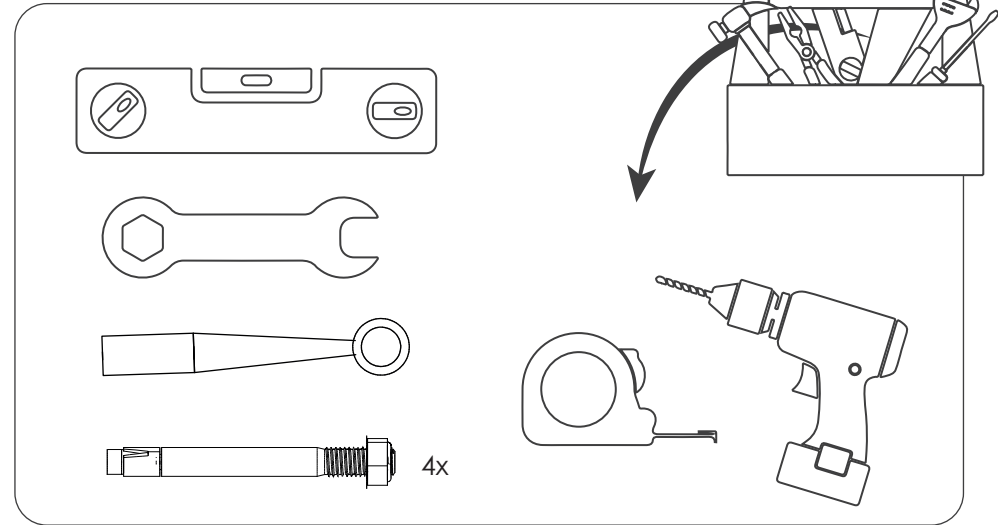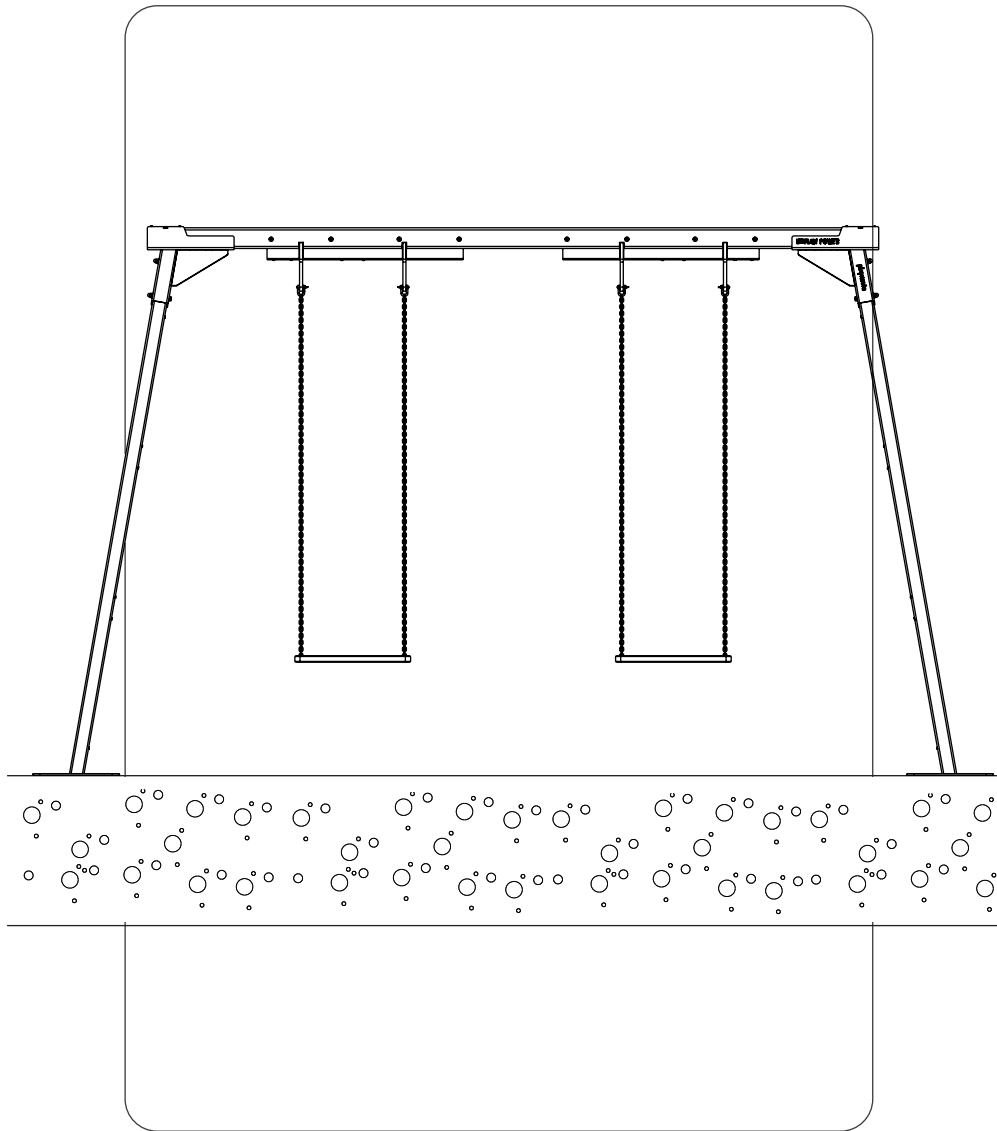



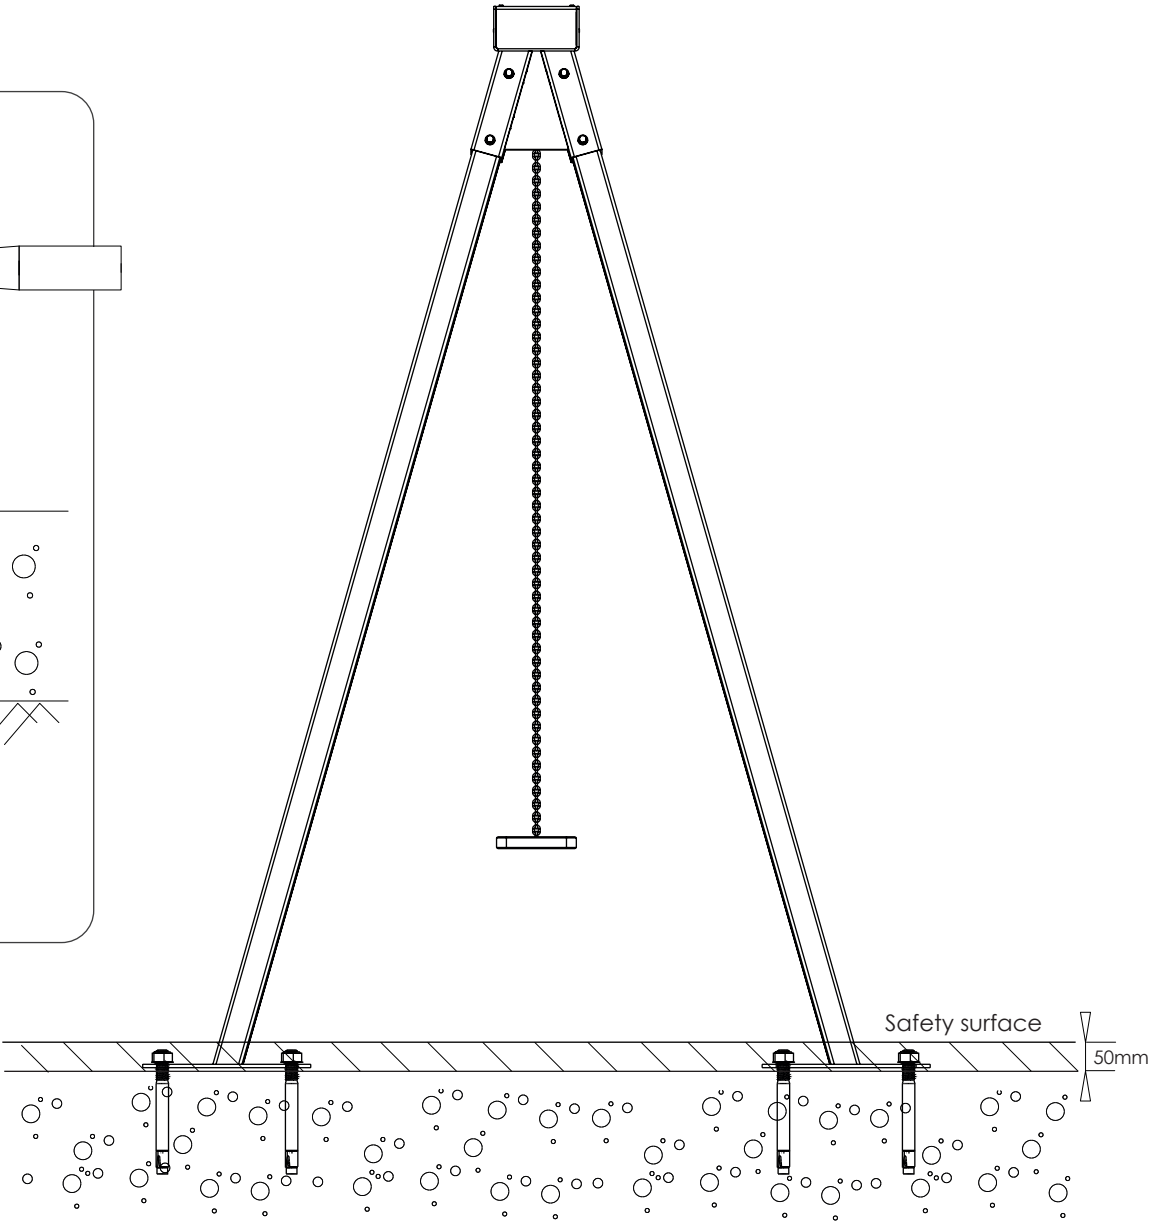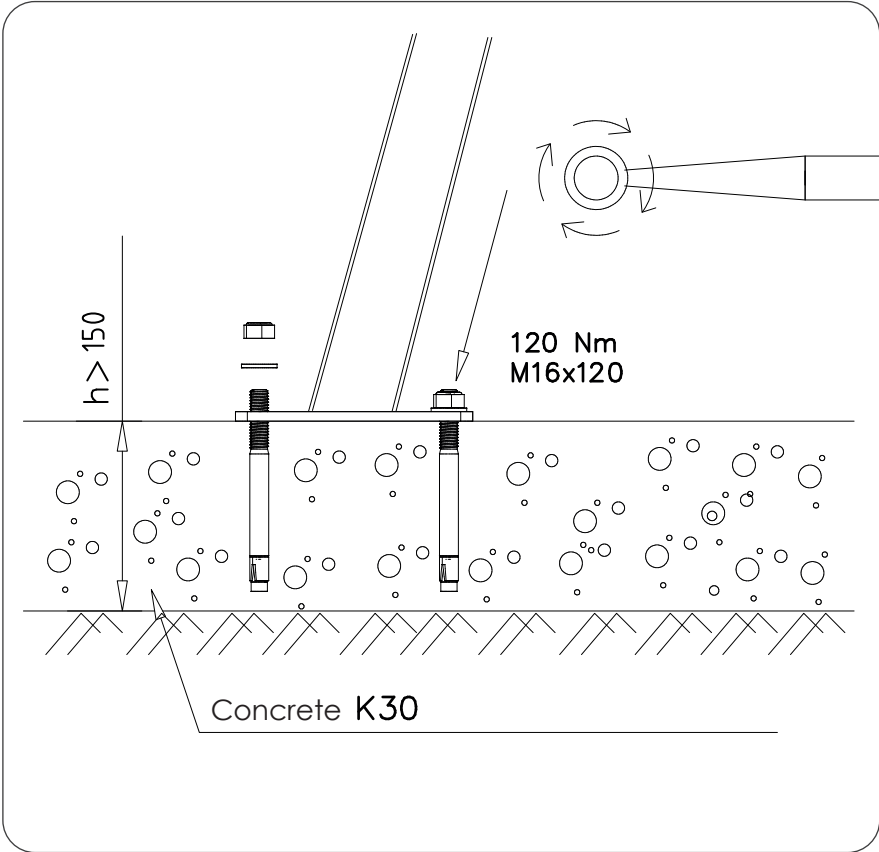

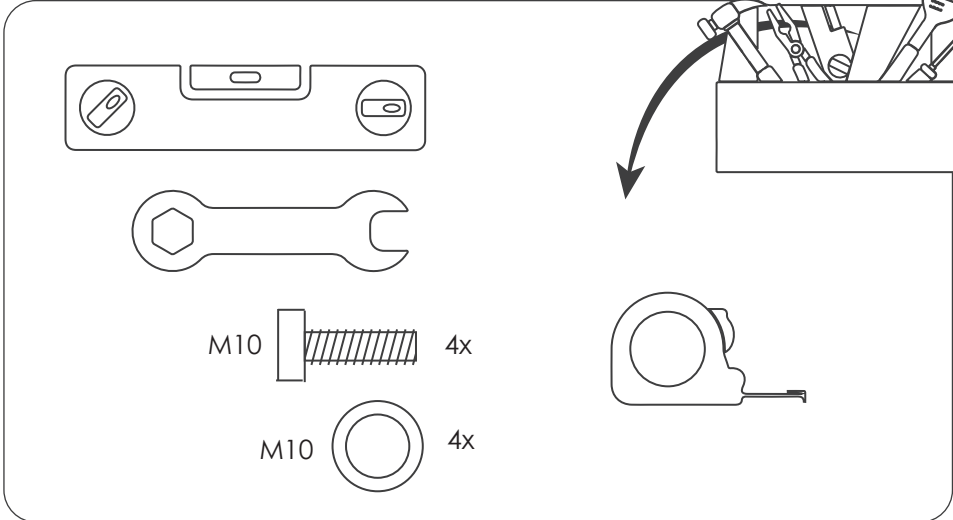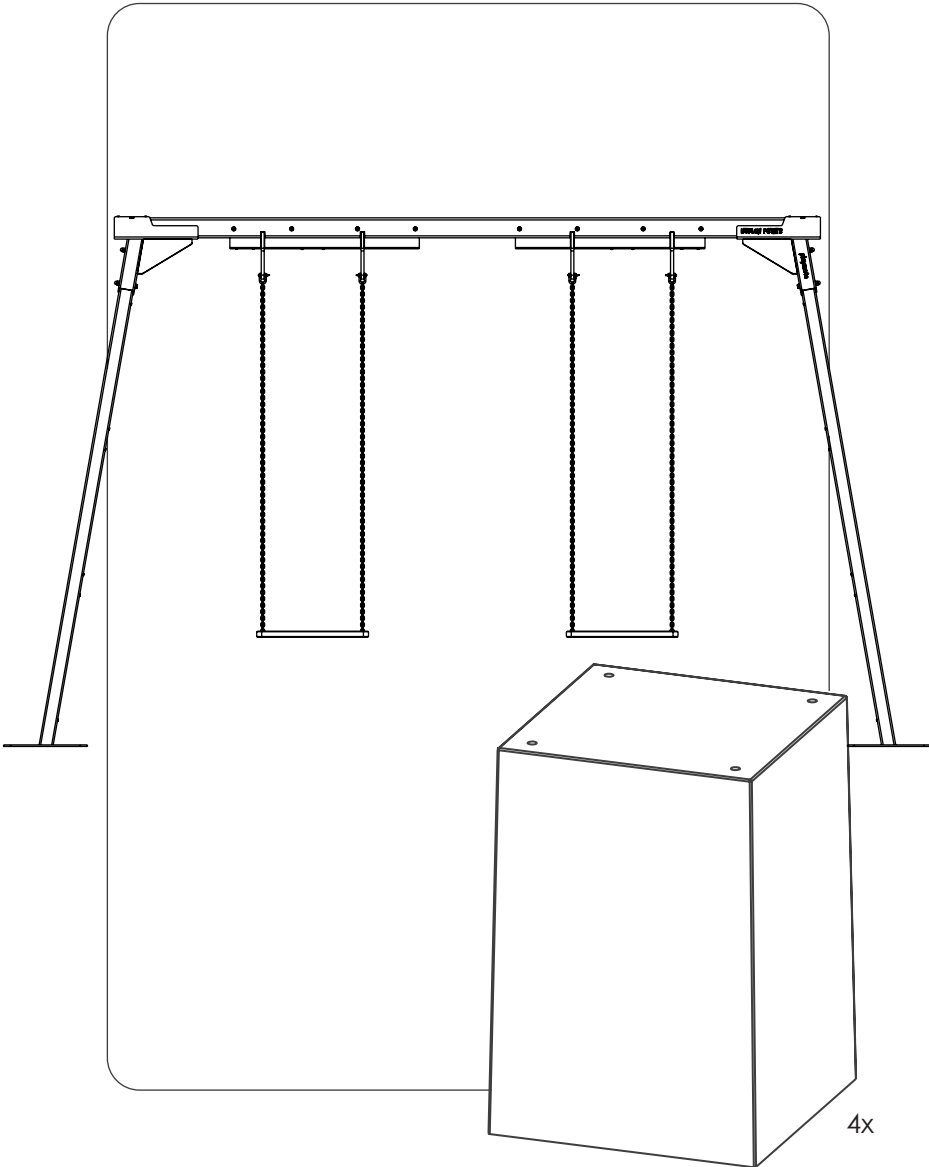

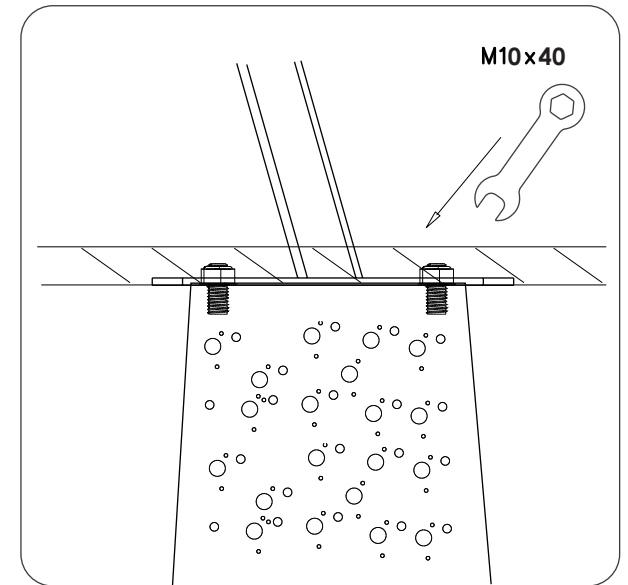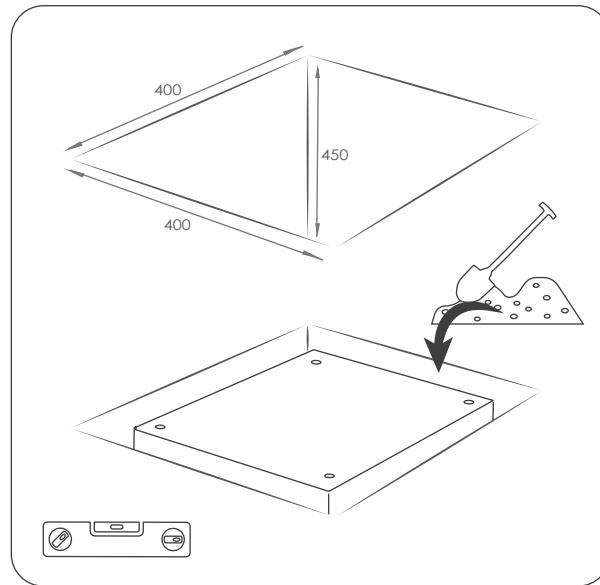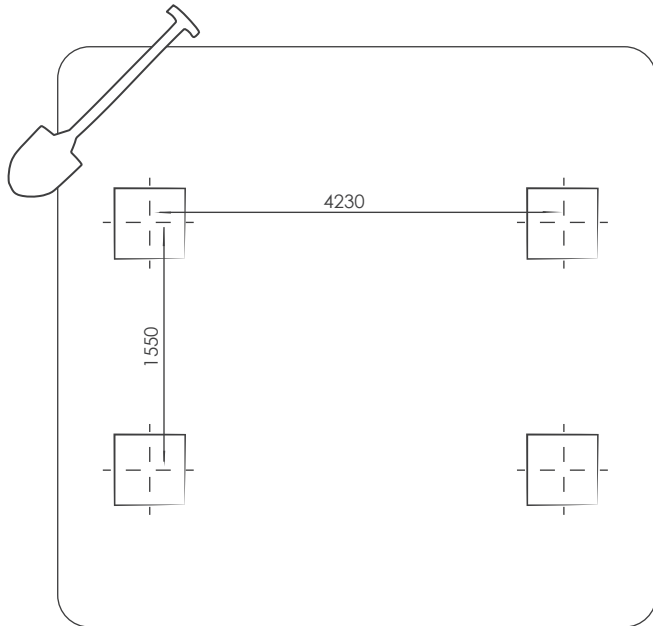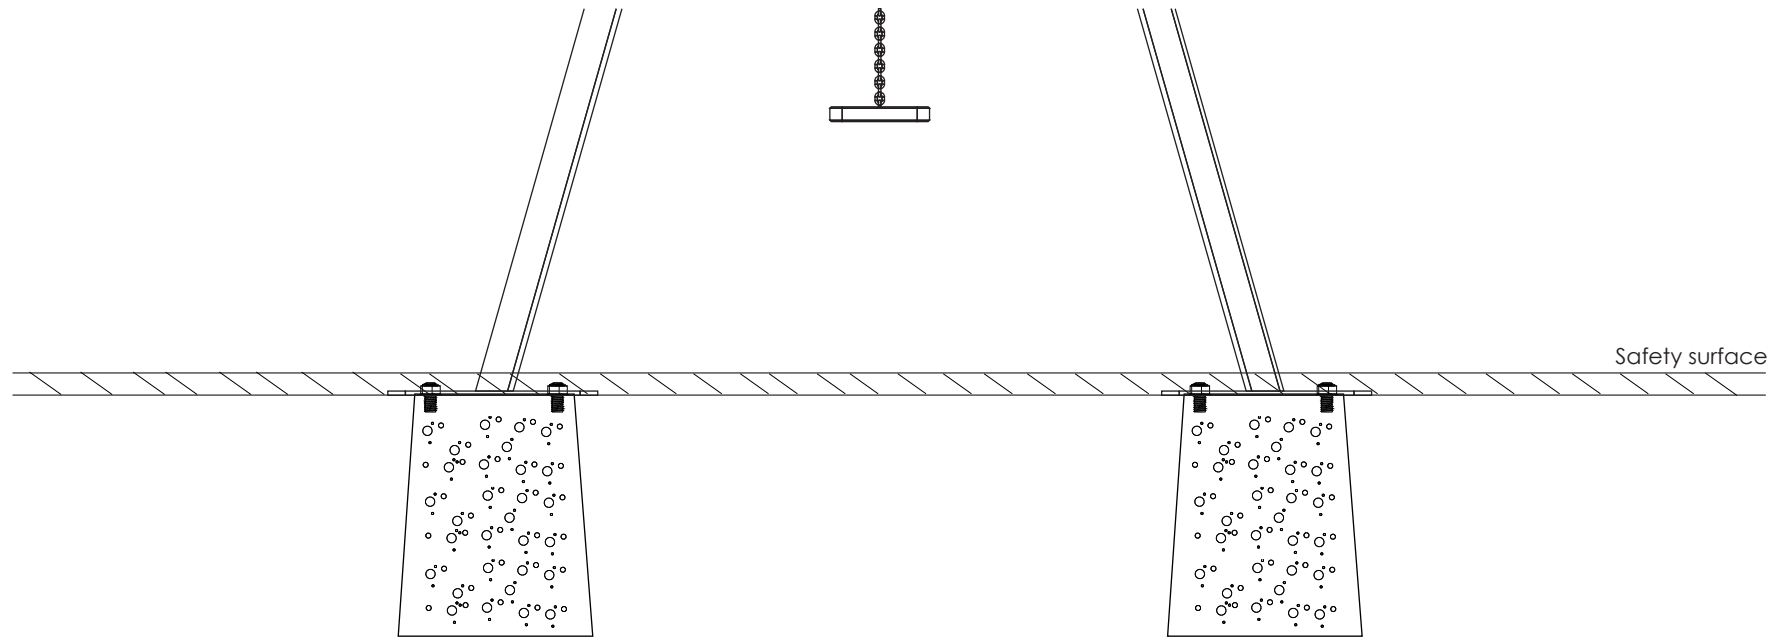

# Open the service hatch

\* Find more information about the computer in the KineticSwing User Manual

