

Surface Fixed

Emperor Chimes Page 1 of 2



Instrument Components:

Emperor Chimes are preassembled

Metric Conversion: 100mm/4" 1.5m/59" 1785mm/70" 2490mm/98"

MADE IN BRITAIN BS EN 1176

Installation Instructions



1. Attach Surface Fixing plates to the base of each chime(1.1) (See Surface Fix Plate Installation Sheet)


2.Locate Chimes to desired location and mark holes to fix to desired surface.

4. Fix to Surface using recommended ground anchors not supplied

5. Make sure all fixings are covered and secure using cover caps provided



Install Instrument with 1.5m free space (from widest point) around it.

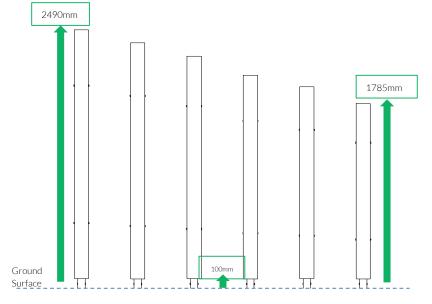



(1.1)



Surface Fix Components:









Ground Fixed

Emperor Chimes Page 2 of 2



Components:

•

M10 Barrel Nut



M10x50 Security Screw




2 Part Cover Cap


Thread Lock Solution Required (Not Supplied)




Surface Fix Plate Installation

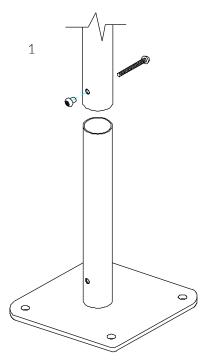

Locate the Surface fix Plate into the leg of the instrument.

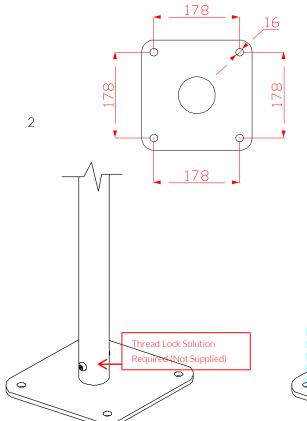

Fix instrument to Surface fix plate using M10 bolt and Barrel Nut and use **thread locking solution** to prevent fixings working loose.

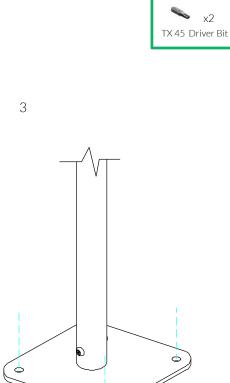

Tools:

Fix Surface Plate to the ground surface **Ground Anchors Not provided**cover fixings with caps provided

Repeat Parts 1-3 for all 6 chimes