



mitab

# stereo & mute

ASSEMBLY INSTRUCTION

## Correct position

Turn the metal frame to place the tubular part at the outer corner of the sofa.

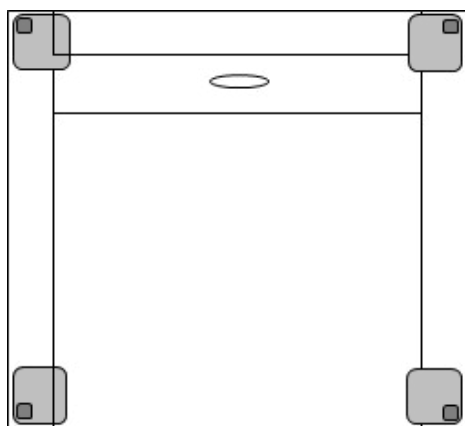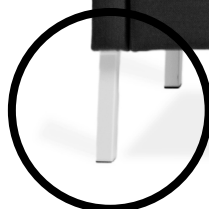

331 070